

## EG Series Fuel Sender Float Arm and Shaft Adjustment Table

Refer to EG21-96048N installation instructions packed with this unit.

Tank Depth		Cut Float Arm Length*		Shaft Length Adjustment	
inches	mm	inches	mm	inches	mm
6	152	2-5/16	59	3-1/16	78
6-1/2	165	2-11/16	68	3-5/16	84
7	178	3	76	3-9/16	90
7-1/2	191	3-3/8	86	3-13/16	97
8	203	3-3/4	95	4-1/16	103
8-1/2	216	4-1/16	103	4-5/16	110
9	229	4-3/8	113	4-9/16	116
9-1/2	241	4-3/4	121	4-13/16	122
10	254	5-1/8	130	5-1/16	129
10-1/2	267	5-7/16	138	5-5/16	135
11	279	5-13/16	148	5-9/16	141
11-1/2	292	6-3/16	157	5-13/16	148
12	305	6-1/2	165	6-1/16	154
12-1/2	318	6-7/8	175	6-5/16	160
13	330	7-3/16	183	6-9/16	167
13-1/2	343	7-9/16	192	6-13/16	173
14	356	7-7/8	200	7-1/16	179
14-1/2	368	8-1/4	210	7-5/16	186
15	381	8-9/16	217	7-9/16	192
15-1/2	394	8-15/16	227	7-13/16	198
16	406	9-5/16	237	8-1/16	205
16-1/2	419	9-5/8	244	8-5/16	211
17	432	10	254	8-9/16	217
17-1/2	445	10-5/16	262	8-13/16	224
18	457	10-11/16	271	9-1/16	230
18-1/2	470	11	279	9-5/16	237
19	483	11-3/8	289	9-9/16	243
19-1/2	495	11-3/4	298	9-13/16	249
20	508	12-1/16	306	10-1/16	256
20-1/2	521	12-7/16	316	10-5/16	262
21	533	12-3/4	324	10-9/16	268
21-1/2	546	13-1/8	333	10-13/16	275
22	559	13-7/16	341	11-1/16	281
22-1/2	572	13-13/16	351	11-5/16	287
23	584	14-1/8	359	11-9/16	294
23-1/2	597	14-1/2	368	11-13/16	300
24	610	14-7/8	378	12-1/16	307

\*Allows approximately 1/4 in. (6 mm) insertion into the float arm connector.

CALL MURCAL TO PLACE YOUR ORDER



P:(661)272-4700 F:(661)947-7570  
 www.murcal.com e-mail:sales@murcal.com